




Toshiba Satellite L305D-S5950 RAM Replacement

This guide is for replacing the RAM modules.

Written By: Ricky Baker

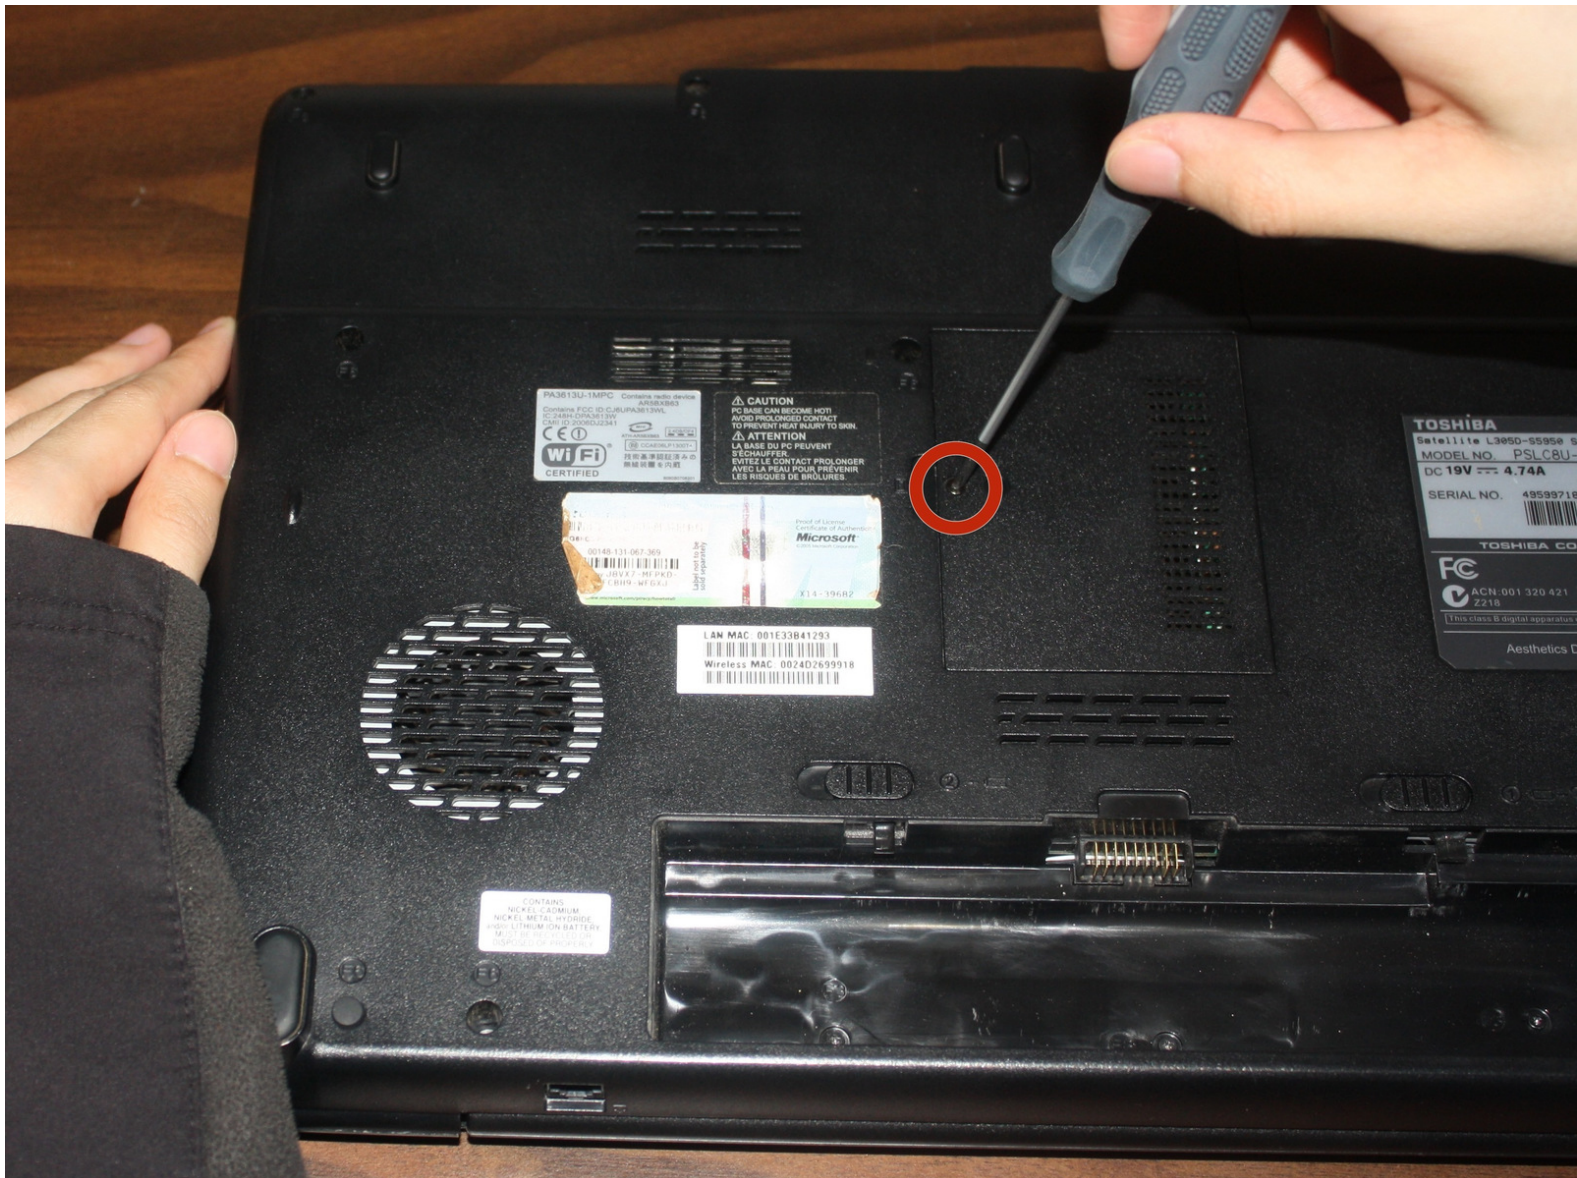



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery





- Locate the two sliding battery locks on the underside of the laptop.

Step 2



- Locate the right battery lock and slide it to the right.

Step 3

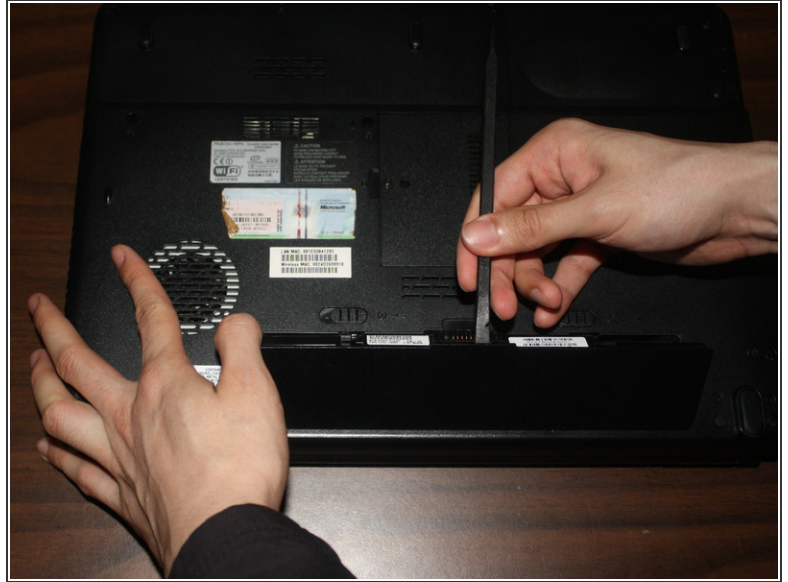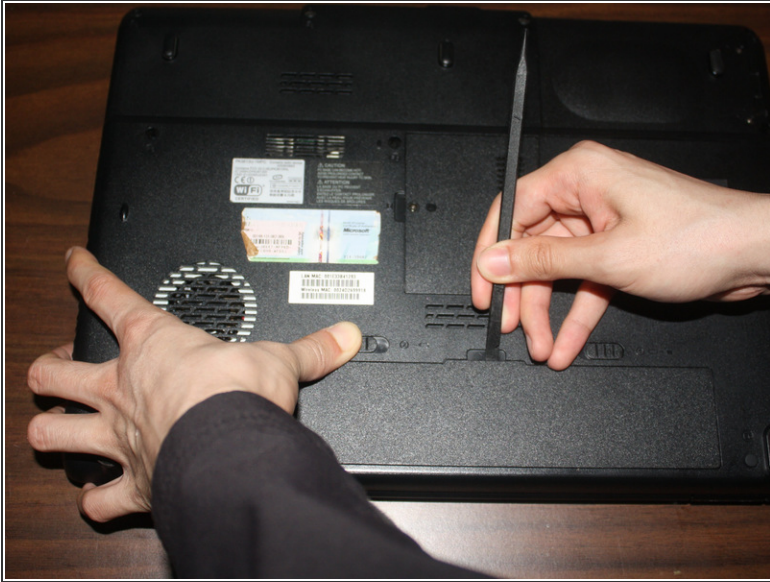

- While holding the left battery lock to the left, lift up the battery using the tab located on the top center of the battery.

Step 4




- Remove the battery from the laptop.

Step 5 — RAM



- Unscrew the RAM cover and rotate the cover up to remove it. The screw should not be fully removed from the cover itself.

Step 6

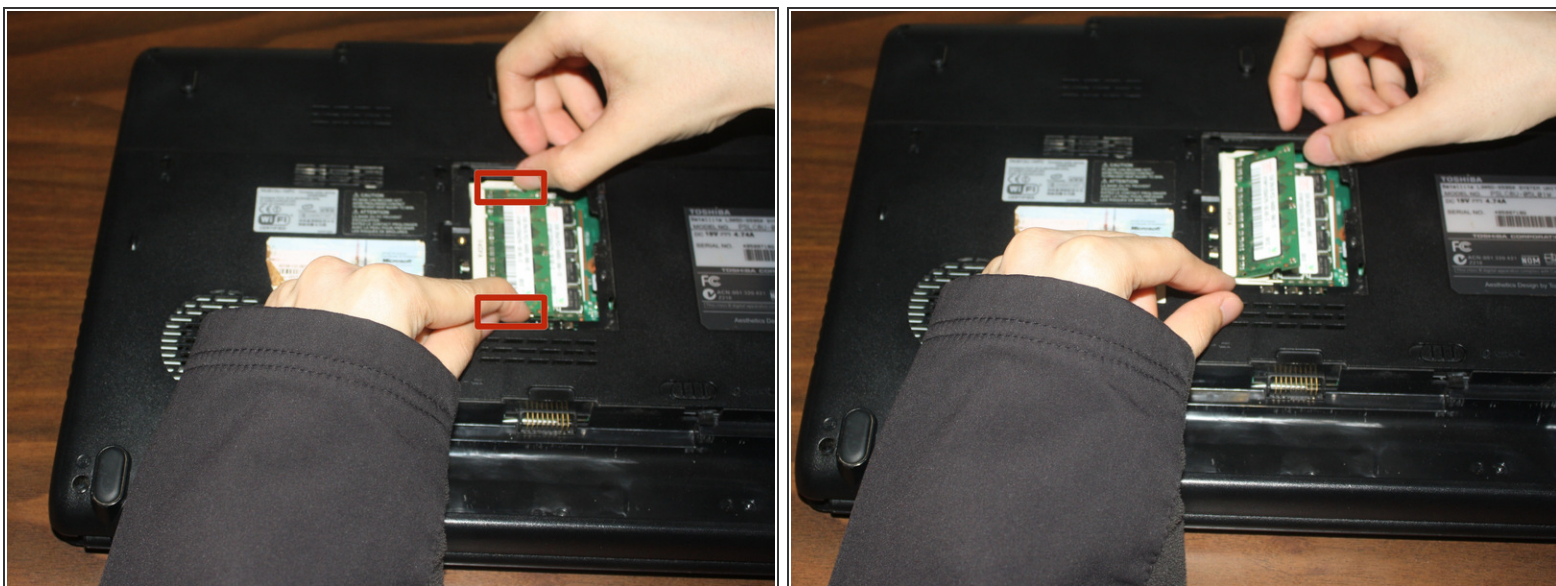


- Push the small levers at the sides of the RAM module away from each other. The RAM module should automatically rotate upwards.

Step 7



- Remove the RAM module by pulling it out at the angle it was rotated to.

Step 8

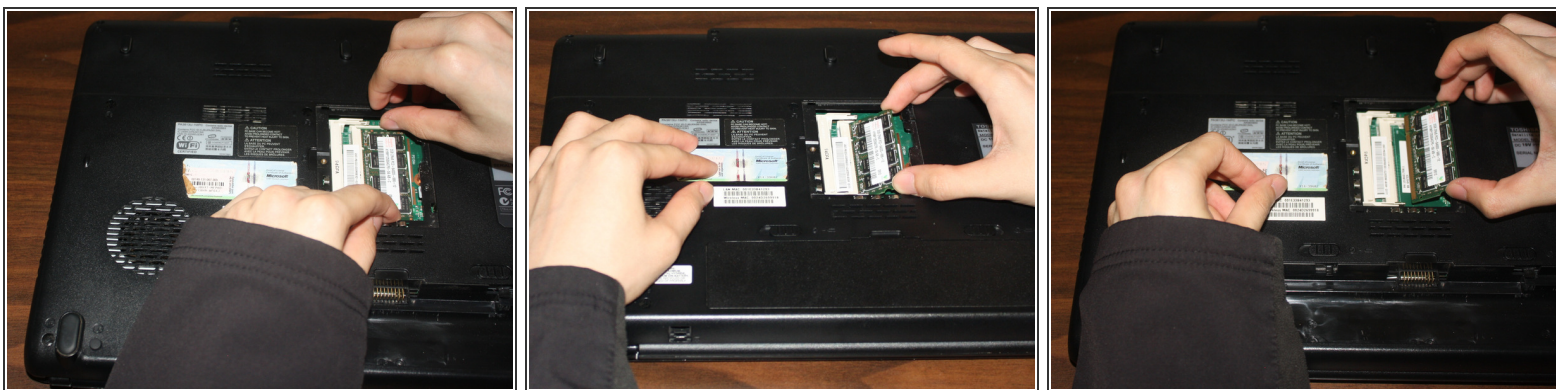

- If you want to replace the second RAM module, apply steps 2 and 3 to do so.

To reassemble your device, follow these instructions in reverse order. When placing the RAM chips in, push them down until the levers snap into place after inserting them into the slot.

This document was last generated on 2017-06-23 03:21:51 PM.